

PlumChef
Electrical Appliance Co., Limited

AIR FRYER OVEN : GAI2S-01 USER MANUAL

Household Use Only Please Read The Manual Carefully Before Use



IMPORTANT SAFEGUARDS

When using an electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handle or knobs.
3. Close supervision is necessary when any appliance is used by or near children.
4. To protect against electric shock, do not place any part of the electric oven in water or other liquid.
5. Do not let cord hang over edge of table or counter, or touch hot surfaces.
6. Do not operate appliance with damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner, return appliance to the nearest Authorized Service Center for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.
8. When operating the oven, keep at least four inches of space on all sides of the oven to allow for adequate air circulation.
9. Unplug from outlet when not in use, or before cleaning. Let it to cool before putting on or taking STOP parts, or before cleaning.
10. To disconnect, turn the control to STOP, then unplug the plug. Always hold the plug, but never pull the cord.
11. Do not cover BAKE TRAY or any part of the oven with metal foil. This may cause overheating of the oven.
12. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
13. Oversized foods or metal utensils must not be inserted in a electric oven as they may create a fire or risk of electric shock.
14. A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on the oven during operation.
15. Extreme caution should be exercised when using containers constructed if anything other than metal or glass.
16. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
17. Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
18. Always wear protective, insulated oven mitts when inserting or removing items

from the hot oven.

19.This appliance has a tempered, safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Tempered glass can break, but the pieces will not have sharp edges. Avoid scratching door surface or nicking edges. If the door has a scratch or nick, contact our consumer relations line before using the oven.

20.Do not use outdoors.

21.Do not use appliance for other than intended use.

22.This appliance is for HOUSEHOLD USE ONLY.

23.The temperature of the door or the outer surface may be higher when the appliance is working.

24. Protect against hurt by sharp edge when action.

25.Temperature of accessible surfaces may be high when the appliance is operating.

26. Glass Door cannot support any goods in the fully open position.

IMPORTANT SAFEGUARDS

CAUTION:

APPLIANCE SURFACES ARE HOT AFTER USE.

Always Wear Protective, Insulated Oven Gloves When Touching Hot Oven Or Hot Dishes And Food, Or When Inserting Or Removing Rack, Pans Or Baking Dishes.

SPECIFICATION

Power

 
Consumption :120V,60Hz

Output : 1500W

Capacity : 12 Litres

SAVE THESE INSTRUCTIONS

COMPONENTS:

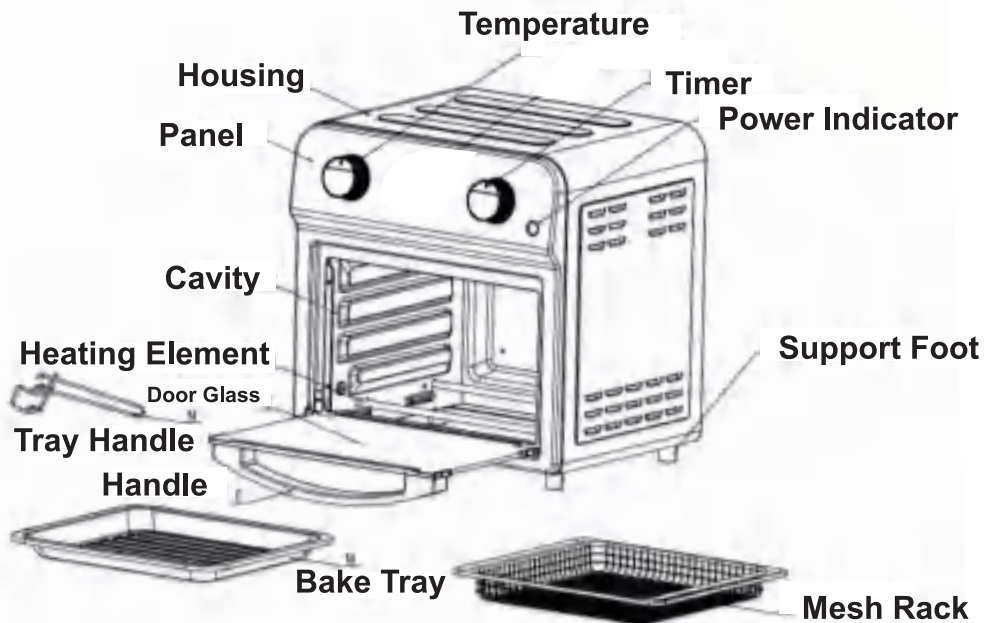

IMPORTANT TIPS:

When baking foods those with oil or water, please use the Baking pan/ drip tray to collect drips and water.

1. Put the food in baking pan directly to bake.
2. Put the food in air fryer rack/basket, and then put the bake tray on the bottom shelf to collect drips and water.

BEFORE USING YOUR ELECTRIC OVEN

Before using your electric oven for the first time, be sure to:

 
1. Read all instructions included in this manual.
2. Make sure oven is unplugged and Time Knob is in the "off" position.
3. Remove all accessories. Wash in hot sudsy water or in dishwasher.
4. Thoroughly dry all accessories and re-assemble in oven. Plug oven into outlet and you are ready to use your new Electric Oven with Grill Rack and Food Tray.
5. It may result in smell or smoke for the first use. This is normal. It is due to the protective substance on heating elements, which avoids salt effects during shipping from factory. So it is recommended to operate oven dry for about 15 minutes at the first, moreover, make sure to keep good ventilation of the room.

USING YOUR AIR FRYER OVEN

Please familiarize yourself with the following oven functions and accessories prior to first use:

- * Thermostat Knob: Choose desired temperature from LOW-200°F-250°F-300°F-350°F-400°F-450°F
- * Timer Knob: To activate timer, turn to right (clockwise) for other use. A bell will sound at end of programmed time.
- * Power Indicator: It is illuminated whenever oven is turned on.
- * Baking pan/Drip tray: For use in broiling and roasting meat, poultry, fish, and various other foods. And for collecting drips and water.
- * Air fryer rack: Use to fry a variety of meats, poultry, chips, popcorn and so on. Remember to put one tray on the bottom shelf to collect drips and water
- * Tray Handle: Allows you to pick up grill rack, food tray or mesh rack.


Temperature

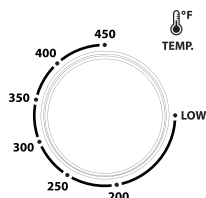

REFERENCE MENU			
FOOD	WEIGHT	TEMP	TIME
FRENCH FRY	0,7 lb	450 °F	18 Mins
PIZZA	6 inch	400 °F	8 Mins
CHICKEN	1,1 lb	450 °F	20 Mins
FISH	1,1 lb	350 °F	25 Mins
TOAST	4 slices	450°F	4,5 Mins

PLEASE PREHEAT FOR 10 MINUTES BEFORE USING.

 Timer

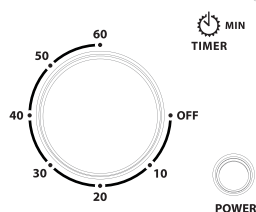

OPERATION

- * Place food to be cooked directly in Bake Tray or mesh rack , put it in the oven and close the oven door.
- * Select proper temperature by the Thermostat Knob.
- * Preset proper cooking time and start the oven. Timing accordingly and checking progress with meat thermometer to ensure desired doneness.
- * Make sure to turn Timer Knob to “0” for turning off the oven when cooking is completed.

Note:

All Toasting Timing Is Based On Meats At Refrigerator Temperature. Frozen Meats May Take Considerably Longer. Therefore, Use Of A Meat Thermometer Is Highly Recommended.

TO STORE

Unplug unit, allow to cool, and clean before storing. Store Electric Oven in its box in a clean, dry place. Never store appliance while it is hot or still plugged in. Never wrap cord tightly around the appliance, use the Cord Storage area on the bottom of the back of the oven. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

USE MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Contact a qualified appliance repair technician if the product requires servicing.

CLEANING INSTRUCTIONS

ALWAYS UNPLUG OVEN AND ALLOW TO COOL BEFORE CLEANING TO PROTECT AGAINST THE RISK OF ELECTRICAL SHOCK, DO NOT IMMERSER THE UNIT, CORD OR PLUG IN WATER OR OTHER LIQUID.

YOUR OVEN FEATURES A QUICK-CLEAN COATING. IF DESIRED, WIPE WALLS WITH DAMP CLOTH MOISTENED WITH MILD DETERGENT.

DO NOT USE STEEL WOOL SCOURING PADS OR ABRASIVE CLEANERS OR SCRAPE WALLS WITH METAL UTENSILS, AS THIS MAY DAMAGE THE QUICK-CLEAN INTERIOR.

WASH ALL ACCESSORIES IN HOT SUDSY WATER OR IN A DISHWASHER. WIPE THE DOOR WITH A CLEAN DAMP CLOTH, AND DRY WITH A PAPER OR CLOTH TOWEL. CLEAN EXTERIOR WITH DAMP CLOTH.

DO NOT USE AN ANRASIVE CLEANER. AS IT MAY DAMAGE THE EXTE-RIOR FINISH.

DO NOT USE AN ANRASIVE CLEANER OR STEEL WOOL SCOURING PAD ON DRIP PAN, AS IT MAY DAMAGE THE PROCELAIN ENAMEL FINISH.

DRY ALL PARTS AND SURFACES THOROUGHLY PRIOR TO PLUGGING OVEN IN AND USING.

ENVIRONMENT FRIENDLY DISPOSAL

Disposal:do Not Dispose This Product As Unsorted Municipal Waste. Collection Of Such Waste Separately For Special Treatment Is Nec-essary.





PlumChef

Plum-tastic
Start With PlumChef.

Your Culinary Partner.